



## Product Data Sheet

### ANTIMICROBIALS REDUCE HOSPITAL INFECTIONS

According to a survey by the Center for Disease Control (CDC), 3.2% of inpatients in U.S. acute care hospitals contract at least one health care associated infection (Center for Disease Control, 2018). Device associated infections accounted for one in every four infections. Indwelling devices, such as central venous catheters, are particularly susceptible to bacteria colonization which can enter the blood stream. Increasingly, medical device companies are evaluating antimicrobial additives for plastics to kill harmful bacteria on the surface of device components.

Inorganic additives, such as ionic silver, are highly successful at killing bacteria and preventing colonization. Combat master batches use high loadings of Sciescent Agion™ ionic silver-based antimicrobial technology in a universal polymer matrix. These are dry blended with unmodified polymers at letdown percentages from 2-10%, depending on the polymer and application. These include thermoplastic polyurethane (TPU) used for indwelling catheters, and acrylonitrile styrene butadiene (ABS) and polycarbonate (PC) used for device handles, bedrails and diagnostic equipment housings.


### COMBAT™ ANTIMICROBIAL MASTER BATCHES

Combat™ AD master batch is designed using Agion AD antimicrobial additive: a fine particle zeolite (< 4 µm) and high proportioned ionic silver (20-24%). The master batch consists of 40% Agion AD and 60% ethylene vinyl acetate (EVA) based universal polymer alloy carrier. Combat AD is commonly used in thermoplastic urethanes (TPU) and silicones for indwelling devices such as central venous (CV) catheters.


Combat™ AK master batch is designed using Agion AK antimicrobial additive: a large particle zeolite (> 6 µm) and a low proportioned ionic silver (4-6%). The master batch consists of 40% Agion Ak and 60% ethylene vinyl acetate (EVA) based universal polymer alloy carrier. Combat AK is commonly used in polycarbonate and acrylonitrile butadiene styrene (ABS) polymers for high-touch surface components and devices. These include bedrails, diagnostic equipment housings and instrument handles.

### AGION™ TECHNOLOGY

*Silver ions are bonded to inert zeolite. The unique properties of zeolite provide selective ion exchange, absorption, separation and catalysis. The silver ions attack multiple targets in the microbe to prevent it from growing to a destructive population. This tri-modal action fights cell growth by preventing respiration (inhibit transport functions in the cell wall), inhibiting cell division (reproduction), and disrupting cell metabolism.*

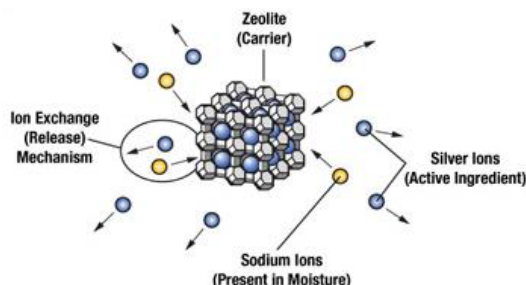

**PATENTED, MULTI-FACETED ZEOLITE CRYSTAL CARRIER**

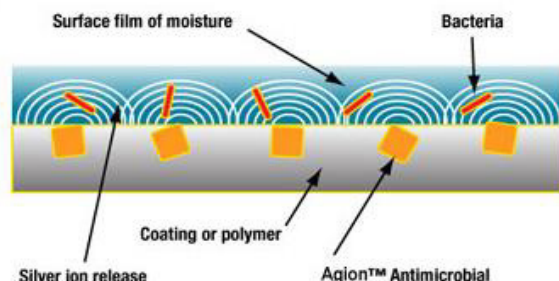






**SILVER ION EXCHANGE PROCESS**



The following charts provide efficacy data in various polymers.

Methicillin-resistant Staphylococcus aureus (MRSA) and carbapenem-resistant Enterobacteriaceae (CRE) are bacterium resistant to most common antibiotics, and are most often present in health care settings. The charts demonstrate how the bacterium are affected by the technology.

The percentage of Agion AD and AK antimicrobial technology represents the final amount in the polymer component, after dry blending the appropriate amount of Combat master batch with the designated polymer and processing.

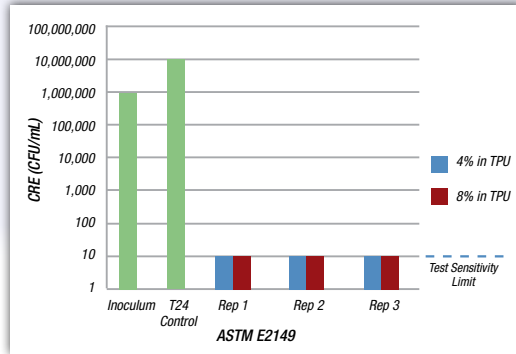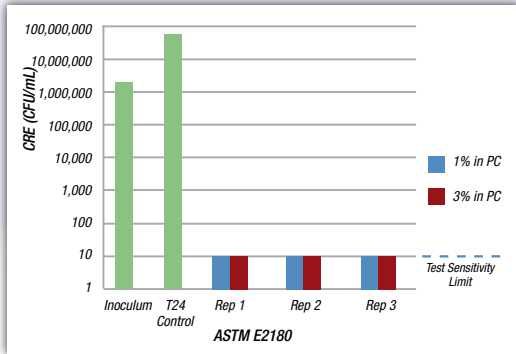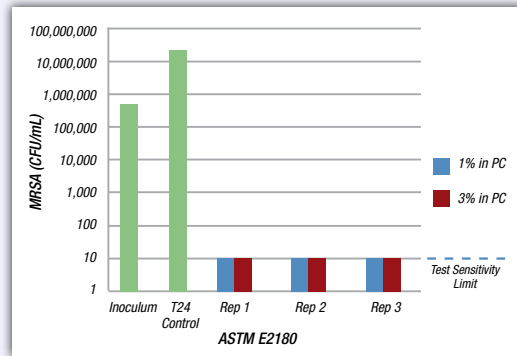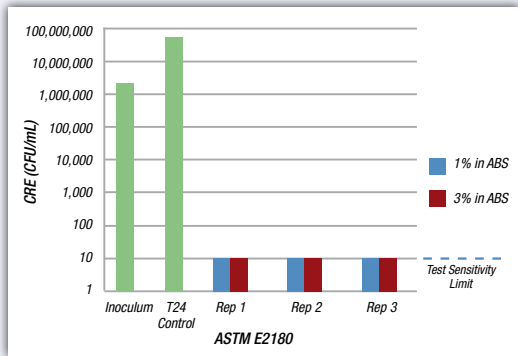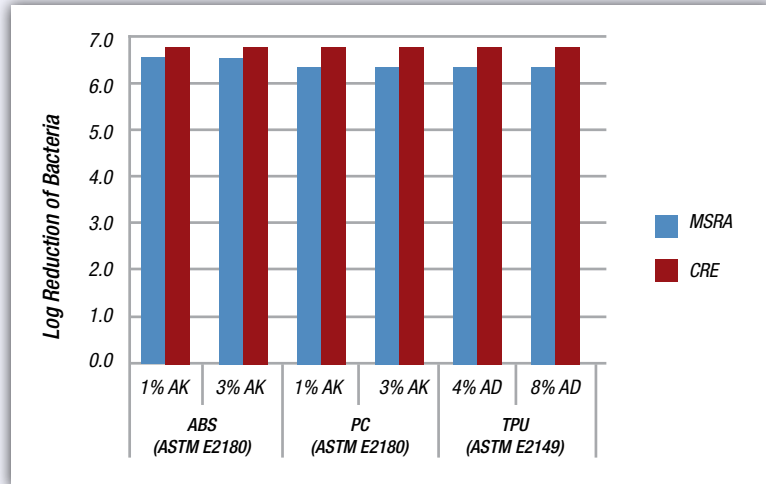

Foster Polymer Distribution

45 Ridge Road, Putnam, CT 06260 • P: 860.928.4102 F: 860.928.4226  
www.fosterpolymers.com

Foster Corporation (Foster) believes that the information contained in this document is an accurate description of the typical characteristics and/or uses of the product or products, but it is the customer's responsibility to thoroughly test the product in each specific application to determine its performance, efficacy and safety for each end-use product, device or other application. Suggestions of uses should not be taken as inducements to infringe any particular patent. The information and data contained herein are based on information we believe reliable. Mention of a product in this documentation is not a guarantee of availability. Foster reserves the right to modify products, specifications and/or packaging as part of a continuous program of product development.

FOSTER MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR OF INTELLECTUAL PROPERTY NON-INFRINGEMENT, INCLUDING, BUT NOT LIMITED TO PATENT NON-INFRINGEMENT, WHICH ARE EXPRESSLY DISCLAIMED, WHETHER EXPRESS OR IMPLIED, IN FACT OR BY LAW. FURTHER, FOSTER MAKES NO WARRANTY TO YOUR CUSTOMERS OR AGENTS, AND HAS NOT AUTHORIZED ANYONE TO MAKE ANY REPRESENTATION OR WARRANTY OTHER THAN AS PROVIDED ABOVE. FOSTER SHALL IN NO EVENT BE LIABLE FOR ANY GENERAL, INDIRECT, SPECIAL, CONSEQUENTIAL, PUNITIVE, INCIDENTAL OR SIMILAR DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGES FOR HARM TO BUSINESS, LOST PROFITS OR LOST SAVINGS, EVEN IF FOSTER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, REGARDLESS OF THE FORM OF ACTION.